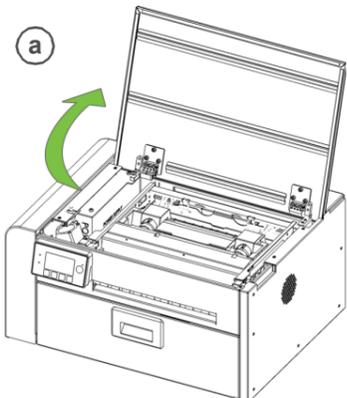
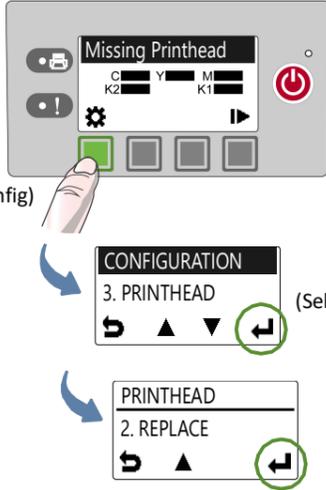


4 Install printhead

a 



b  (Config)

Missing Printhead
C K2 Y M K1
K1
[Settings] [Back] [Next] [Power]

CONFIGURATION
3. PRINthead (Select)
[Left] [Up] [Down] [Right]





PRINthead
2. REPLACE
[Left] [Up] [Down] [Right]

! Wait for printhead latch to be released. It will pop open. DO NOT force it open as it may break.

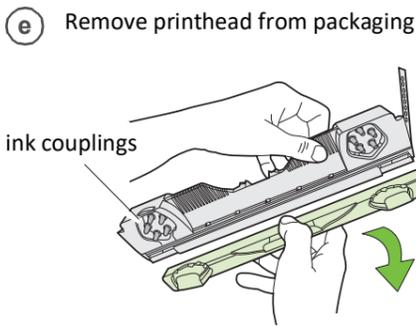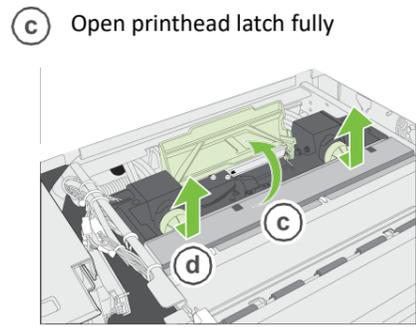


NOTE: Keep the orange cover. You will need it to cap the printhead if it is removed from the printer.


! Do not touch the ink couplings, electrical contacts, or nozzles.

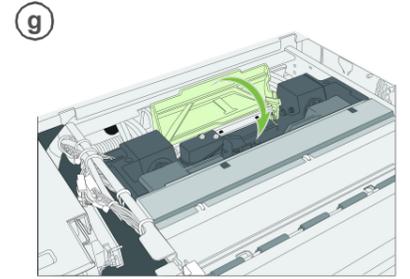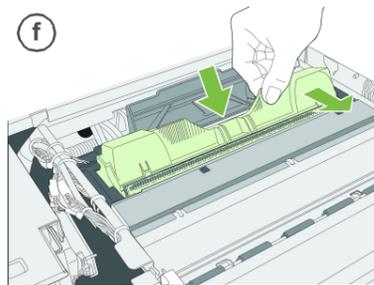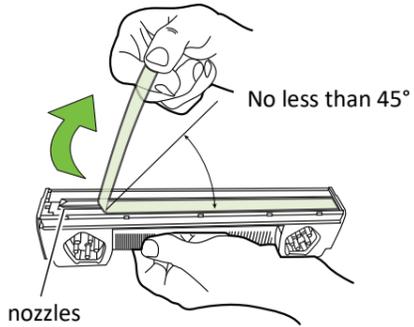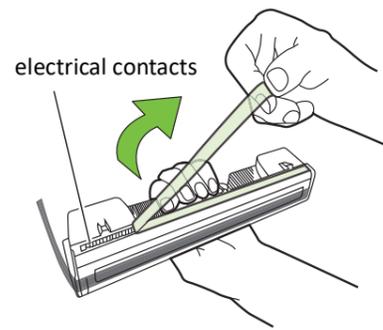





Check that ink is flowing through the tubes on both sides of the printhead.

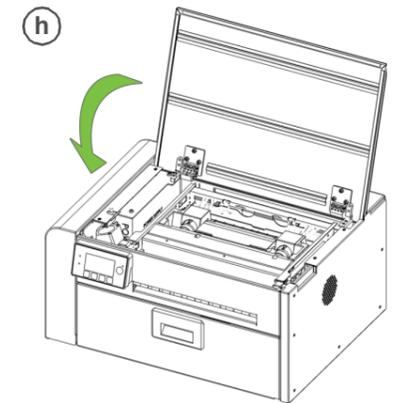


5 Install unwinder

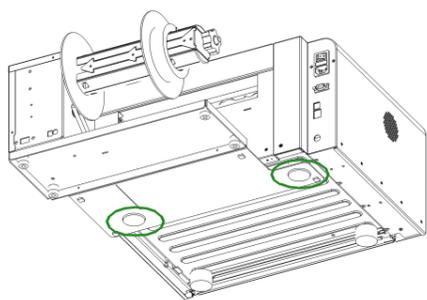

Rear rubber feet of printer fit into holes on base of unwinder.

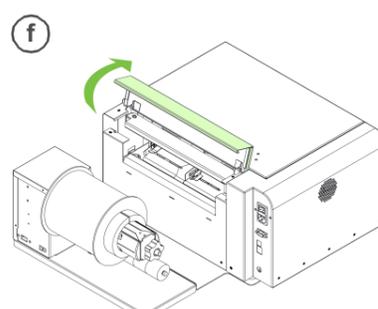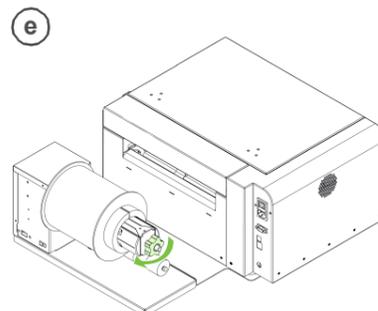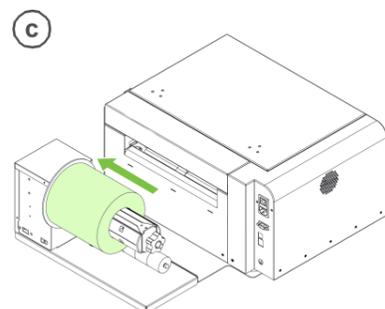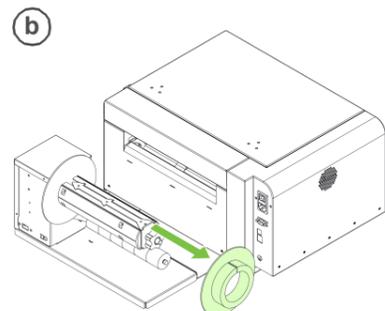

g Insert media until it stops. Wait for printer to load media.

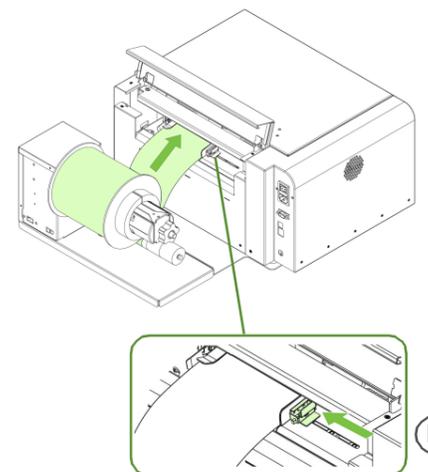

6 Load media

